

EN Instruction Manual

- | | |
|-----------------------------|---|
| 1. ON/OFF | 9. CONFIRM SELECT |
| 2. DISPLAY | 10. BACKWARD / DOWN |
| 3. + / - VOLUME | 11. ANTENNA |
| 4. DAB / FM | 12. BATTERY DOOR |
| 5. STATION PRESET FUNCTION | 13. AC JACK |
| 6. 3.5mm EARPHONE JACK | 14. USB CONNECTOR (in the battery door) For software update. Please leave it for service professional only. |
| 7. MEMU | |
| 8. FORWARD / UP | |

- 1 -

Changing Display Information

- Repeatedly press and release MENU button to browse through 'Scrolling text', 'Signal strength', 'Program Type', 'Ensemble', 'Frequency', 'Signal quality', 'Bitrate and Codec', 'Time' and 'Date'.

Station List

- Press or buttons to select 'Station list'. Press or buttons to browse through the station list, and then press button to select the station you want to play.

Updating Station List

Press and hold **MENU** button, and then press or buttons to select 'Full scan', press button to confirm.

Manual Tune

- Press and hold **MENU** button, and then press or buttons to select 'Manual tune', press button to confirm, the channel number and frequency will show on the display.
- Press or buttons to cycle through the channels and then press button to confirm your selection.

Note: If there is a multiplex corresponding to this channel and frequency, then the display will show a tuning meter with the signal strength and the multiplex name after a few seconds.

- Press and hold **MENU** button to exit manual tune.

- 3 -

Battery Operation

- Switch off the mains supply and remove the cable from the power socket.
- Remove the battery compartment cover at the back of the radio, refer to picture 1.
- Install 3pcs new AA batteries, referring to the markings inside the battery compartment.

Note: please do not reverse any battery, do not mix battery types and do not mix old and new batteries.

- Cover the battery door.
- Slide button up to turn on the unit, battery operation will be selected automatically.
- If you won't use the radio for an extended period, please remove the batteries to avoid damage.

Note: replace batteries when sound is weak and/or display is flashing.

DAB MODE

Power on


Extend the antenna at the back top of radio. Slide button up/down to turn on/off radio.

Adjusting volume

The default volume level is level 7. Press + / - button to adjust volume to the desired level.

- 2 -

Downward push the projection and then open the battery door.

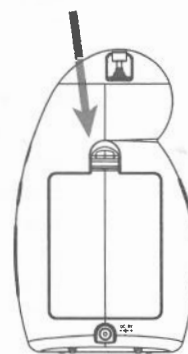

Picture 1

Setting DRC (Dynamic Range Control) Value

You can set the compression level of stations to eliminate the differences in dynamic range or sound level between radio stations.

- Press and hold **MENU** button, and then press or buttons to select 'DRC', press button to confirm.
- Press or buttons to browse through 'DRC high', 'DRC low' and 'DRC off', and then press button to confirm your selection.

Prune Inactive Stations

- Press and hold **MENU** button, and then press or buttons to select 'Prune', press button to confirm.
- Press button to select 'Yes', and then press button to prune.

FM MODE

Switching to FM Mode

Press **DAB/FM** button to tune in FM Mode. For initial use, it will start at the beginning of the FM frequency range (87.50MHz).

Manually Scan

While frequency is showing up, shortly press or buttons to adjust FM frequency by 0.05MHz per step; press or buttons longer or press **MENU** button to automatically scan to next available station; press and hold or buttons to search until the button is released.

- 4 -

Changing Display Information

1. Repeatedly press and release **MENU** button to browse through 'Radio text', 'Program Type', 'Station name or frequency', 'Audio info', 'Time' and 'Date'. Stop at the option you would like.

Scan Setting

By default, FM scans stop at any available station. This may result in a poor signal-to-noise ratio (hiss) from weak stations.

1. To change the scan settings to stop only at stations with good signal strength, press and hold **MENU** button, and then press Δ or ∇ buttons to select '**Scan setting**', press \leftarrow to confirm.
2. Press ∇ button to select 'Strong stations only', and then press \leftarrow button to confirm.

Audio Setting

By default, all stereo stations are reproduced in stereo. For weak stations, this may result in a poor signal-to-noise ratio (hiss).

1. To play weak stations in mono, press and hold **MENU** button, and then press Δ or ∇ buttons to select '**Audio setting**', press \leftarrow to confirm.
2. Press ∇ button to select 'Forced mono', and then press \leftarrow button to confirm.


Station Preset Function

DAB MODE

Storing Station:

Press and hold  \rightarrow Press Δ or ∇ \rightarrow Press \leftarrow


Recalling Preset Station:

Press  \rightarrow Press Δ or ∇ \rightarrow Press \leftarrow


- 5 -

FM MODE

Storing Station

Press **DAB/FM** button to convert into FM mode; to store current playing station, press and hold  button until display shows 'Preset Store'.

Recalling Preset Station

Press **DAB/FM** button to convert into FM mode, and then press  button to recall the stored station.

System Settings

Language

Press and hold **MENU** button \rightarrow '**System**' \rightarrow '**Language**', press Δ or ∇ buttons to select your preferred language, and press \leftarrow button to confirm.

Factory Reset

Doing this order, your stored station in FM mode would be erased as well as language setting. Radio will back to its ordinary ex-factory settings. Press and hold **MENU** \rightarrow '**System**' \rightarrow '**Factory Reset**', press Δ or ∇ buttons to select 'Yes', and then press \leftarrow button to confirm. Your radio will restart again.

Get SW Version

Press and hold **MENU** \rightarrow '**System**' \rightarrow '**SW version**', press \leftarrow button to confirm, then you get it.

- 6 -

Specifications

ITEMS	SPECIFICATIONS
Description:	DAB/DAB+ and FM digital radio
Output Power:	0.5Wrms
Frequency Ranges:	FM: 87.5-108MHz DAB/DAB+: 174.928 - 239.200MHz
Power Supply:	AC-DC power adapter: Input: 100-240Vac, 50/60Hz Output: 5Vdc, 1.0A
Dimension(L x W x H):	78mm x 87mm x 146mm



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste.

There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

- 7 -

Safety Precautions

- This safety and operating instruction should be retained for future reference.
 - The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
 - Avoid installing the unit in locations described below:
 - o Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
 - o On top of other stereo equipment that radiate too much heat.
 - o Places blocking ventilation or dusty places.
 - o Places subject to constant vibration.
 - o Humid or moist places.
 - No naked flame sources such as lighted candles should be placed on or near the unit.
 - The use of apparatus in moderate climates.
 - Operate turning controls and switches as instructed in the manual.
 - Dispose of used batteries in an environmentally friendly manner.
- Before turning on the power for the first time, make sure the power cord is properly installed.



CAUTION
RISK OF ELECTRIC
SHOCK



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

* If available

- 8 -